


Pocket Tone Dialer

Your RadioShack Pocket Tone Dialer lets you use computer-based services (such as alternate long distance or bank-by-phone) even if your phone has a rotary dial or uses pulse dialing.

INSTALLING BATTERIES

Your tone dialer uses three AAA alkaline batteries for power. We recommend RadioShack batteries.

1. Set **ON/OFF** to **OFF**.

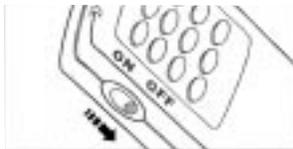

2. Push open the battery compartment cover in the direction of the arrow.



3. Install fresh batteries as indicated by the polarity symbols (+ and -) marked in the compartment.
4. Replace the cover.


When the **POWER BATTERY LOW** indicator dims or goes off, or the tones' volume weakens, replace the batteries.

OPERATION

1. Place the dialer's rubber ring against the phone's mouthpiece.



2. Set **ON/OFF** to **ON**.

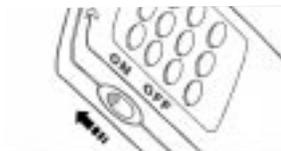

3. Dial the desired numbers on the dialer's keypad.

To use an alternate long distance service (or other computer-based service) from a rotary or pulse-dialing phone, use the phone's dial to call the service's local number, then use the tone dialer to communicate with the service's computer.

Operating Tips

The dialer's tones are strong enough to activate most equipment, but they might not work when using the dialer with older telephones that have weak microphones. In such cases, hold the telephone's handset vertically, with the dialer's rubber ring directly over the mouthpiece.



If you still have problems, lightly tap the handset several times on a hard surface. These taps loosen the carbon particles in the microphone to make it perform better.

MAINTENANCE

These suggestions will help you care for your RadioShack Pocket Tone Dialer so you can enjoy it for years.

- Keep the dialer dry.
- Use and store the dialer only in normal temperature environments.
- Keep the dialer away from dust and dirt.
- Handle the dialer gently and carefully. Do not drop it.
- Use only fresh batteries of the required size and type.
- Wipe the dialer with a damp cloth occasionally. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the dialer.

Modifying or tampering with the dialer's internal components can cause a malfunction and might invalidate your dialer's warranty and void your FCC authorization to operate it. If your dialer is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Requirement	3 AAA Alkaline Batteries
Dial Method	Standard DTMF (Dual-Tone Multi-Frequency)
Telephone-Connection Type	Acoustic
Dimensions	
(HWD)	$3\frac{13}{16} \times 2\frac{1}{8} \times \frac{13}{16}$ Inches
Weight	2.5 oz

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

We Service What We Sell

04/99