

1. How to upgrade Firmware

- * Please back-up all files from the player to your PC since you need to format the memory at the end of process.
- i) Download the latest version of firmware(DAH-1200_OS_Ver._xxxx.zip) from our web-site.
- ii) Connect DAH-1200 with PC
- iii) Unzip the zip file and download the 1200OS.ROM and 1200MENU.IMG file in the root folder of the Player(DAH-1200)
- iv) Disconnect USB Cable and power on with PLAY button. It will be upgraded power off automatically.
- v) Please format the built-in memory of the Player(DAH-1200).

2. How to format the built-in flash memory

- 1 Turn the power off and push the HOLD switch to make the player in HOLD state.



HOLD

- 2 Press the VOL/MENU and PLAY buttons simultaneously and you will see the following LCD screens.



VOL/MENU

PLAY



- 3** The LCD screen displays a message asking if you want to execute the formatting. To format the player, press the VOL/MENU button. To cancel the format, press SRS button.



This the Format?
Yes=Menu, No=Srs

- 4** Pressing THE VOL/MENU button will begin the formatting.



VOL/MENU



- 5** Format is completed. After the message "Completed," it will disappear from the LCD screen.

