

## Desk/Wall Battery Test Center

The RadioShack Desk/Wall Battery Test Center is an accurate tester for AAA, AA, C, D, and 9 volt batteries. The partitioned case lets you easily store up to 40 batteries by type so you can quickly find the ones you want.

**Note:** The Battery Test Center is not designed to test button cell batteries, 6 or 12 volt lantern or marine batteries, or Ni-Cd/Ni-MH batteries.

Your Battery Test Center comes with three button cell batteries to power the power indicator. To prevent battery drain, the Battery Test Center is shipped with a plastic insulation slip which you must remove to have the battery test function work.

*(illus of insulation slip removal)*

## MOUNTING THE TEST CENTER

To save space, you can mount the Battery Test Center on a wall using the supplied screws. Select a sturdy mounting location, then use the two holes at the top of the Battery Test Center as a template to mark the mounting hole locations on the wall. Thread the screws through the holes in the Battery Test Center into the marked locations and use a Phillips screwdriver to tighten them securely.

*(illus of mounting hole locations on ca.*

## STORING BATTERIES

The Battery Test Center has two storage compartments for each battery type so you can separate good/charged and weak/discharged AAA, AA, C, D, and 9V batteries.

*(illus of product face with markings vis*

Your Battery Test Center comes with five pairs of labels to help you separate "Charged" from "Discharged" rechargeable alkaline batteries after you test them. Paste the labels on the tabs outside the cases.

## TESTING AAA, AA, C, AND D BATTERIES

1. Lift up the battery compartment cover on the top of the test center.

*(illus of battery compartment with cover c*

2. Slide the negative terminal bar to the right and hold it there. The red indicator lights. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside the compartment, then slowly release the bar.

*(illus of negative terminal bar with directi  
arrow pointing right and polarity symbol:  
visible)*

3. If only the red indicator is lit, the battery is weak and needs to be replaced or recharged.

If the red and yellow indicators light, the battery's power is fair.

If the red, yellow, and green indicators light, the battery's power is good.

*(illus of LEDs labeled "Red," "Yellow," and "Gr*

## TESTING A 9-VOLT BATTERY

Place the 9-volt battery's terminals on the contacts inside the battery compartment with the positive (+) terminal on the contact marked + and the negative (-) terminal on the contact marked -. Press the battery down to get good contact.

The indications are the same as for other battery types (see Step 3 in "Testing AAA, AA, C, and D Batteries").

***(illus of open battery compartment with callout contacts and polarity markings visible)***

## REPLACING INTERNAL BATTERIES

When the power indicators light dimly or not at all during battery testing, follow these steps to replace the test center's internal batteries with three new type 357A (or LR44) button cell batteries (such as Cat. No. 23-115).

1. Turn the Battery Test Center over and use a Phillips screwdriver to remove the screw from the battery compartment cover, then remove the cover.

***(illus of battery compartment cover removal)***

2. Use a flathead screwdriver to gently pry out the three button cell batteries.

***(illus of three batteries in compartment)***

**Warning:** Dispose of old batteries promptly and properly, and keep batteries out of reach of children. Swallowing a button-cell battery could be fatal.

3. Install three fresh batteries according to the polarity symbols (+ and -) marked above the compartment.

### Notes:

- Handle the batteries by their edges, and be sure you replace all three batteries at the same time. Do not mix old and new batteries.
  - For easier installation, install the third battery between the first and second ones.
4. Replace the battery compartment cover and secure it with the screw.

## CARE

To enjoy your test center for a long time:

- Keep the test center dry. If it gets wet, wipe it dry immediately.
- Use and store the test center only in normal temperature environments.
- Handle the test center gently and carefully. Don't drop it.
- Keep the test center away from dust and dirt.
- Wipe the test center with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the test center's internal components can cause a malfunction and invalidate its warranty. If your test center is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RadioShack**  
A Division of Tandy Corporation  
Fort Worth, Texas 76102



