



Cat. No. 23-240B

## BATTERY CHARGER

This battery charger fully recharges the 9.6V nickel-cadmium battery packs used in many remote-controlled cars. It recharges the 9.6V 600 mAh battery pack (RadioShack Cat. No. 23-229) in 14 to 16 hours, and the 9.6V 900 mAh battery pack (Cat. No. 23-329) in 22 to 24 hours.

### CHARGING

The battery requires a complete charge before use. Follow the procedure below for the first and each succeeding use.

**Note:** To protect battery packs, allow them to cool for 20 minutes before recharging them.

1. Connect the charger's connector to the battery's connector. Be sure of correct polarity (gray to black).

**Note:** If the connections do not mate easily, do not force them. They fit only one way. Check that you have positioned the connectors properly.

2. Plug the charger into a standard household AC outlet. The charging indicator lights.
3. Charge the battery pack for 14 to 16 hours (Cat. No. 23-229) or 22 to 24 hours (Cat. No. 23-329).

**Note:** Do not overcharge the battery. Overcharging can reduce its useful life.

4. When you finish charging, disconnect the charger from the AC outlet first. Then disconnect the connectors by pushing the tab and pulling them apart. Never disconnect the battery connector by pulling on the wires.

**Caution:** ALWAYS USE EXTREME CAUTION WHEN RECHARGING BATTERIES. Use only the 9.6-volt turbo racing battery pack and a RadioShack 9.6 volt charger. Using an improperly designed charger, overcharging, or charging battery packs with one or more damaged cells can result in the violent venting of the battery pack, causing personal injury or property damage.

## SPECIFICATIONS

Charging Voltage .....DC 9.6 Volts  
 Charging Current ..... 60 mA

**Warning:** Periodically examine the unit. Look for conditions that might result in a risk of fire, electric shock, or injury to yourself, your children, or others. If you observe any broken or defective wires, connectors, breaks in the housing, or other conditions that appear different than when you first purchased the unit, do not use the product until it is properly repaired.

### RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

 
 
 
*We Service What We Sell*

10/95



**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**



8A6

Printed in Hong Kong



    © 1996 Tandy Corporation.  
All Rights Reserved.  
RadioShack is a trademark used by Tandy Corporation.





© 1996 Tandy Corporation.  
All Rights Reserved.  
RadioShack is a trademark used by Tandy Corporation.

