

Radio Shack

Cat. No. 23-288

Scanner Battery Pack with Charging Stand

Your Radio Shack Scanner Battery Pack with Charging Stand is a spare battery pack for your handheld scanner, plus a charging stand to let you recharge discharged battery packs. When your scanner's battery pack is discharged, you can replace it with a charged one.

To use the battery charging stand to recharge the nickel-cadmium battery pack, you need an AC adapter, such as Radio Shack Cat. No. 20-188 or 273-1665, not supplied.

The battery charging stand lets you recharge the battery packs used in the following scanner models:

Prod. No	Cat. No.	Prod. No	Cat. No.	Prod. No	Cat. No.
PRO-30	20-131	PRO-36	20-137	PRO-44	20-304
PRO-31	20-132	PRO-37	20-138	PRO-50	20-307
PRO-32	20-133	PRO-39	20-303	PRO-62	20-560
PRO-33	20-134	PRO-42	20-302	PRO-60	20-309
PRO-34	20-135	PRO-43	20-300		

Warning: Do not insert a scanner's battery pack that has non-rechargeable batteries installed. They could get hot and explode and injure you or damage the charger.

 
Cautions:

- Do not overcharge the battery pack or you might damage it or the charging stand. Remove the battery pack from the charging stand when you are finished charging.
- To avoid a short circuit across the battery terminals, be sure to place the supplied plastic cover over the battery pack's contacts when the battery pack is not in the charging stand or the scanner.

Note: The recommended AC adapter supplies 9 VDC and 300 mA, its center tip is set to negative (-) and its plug correctly fits the charging stand's **CHG** jack. Using an adapter that does not meet these requirements could damage the charging stand.

© 1995 Tandy Corporation.
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.

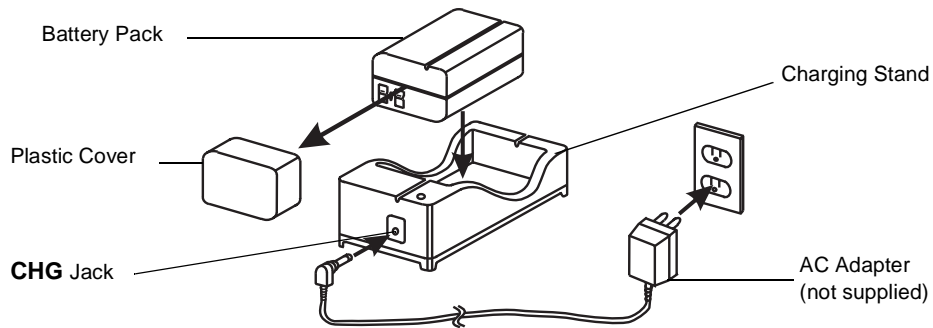

Note: First remove the battery pack from the charging stand and inspect the charging stand to make sure the charging contacts are clear of debris.

1. Insert the battery pack into the charging stand.
2. Plug the adapter's barrel plug into the charging stand's **CHG** jack.
3. Plug the adapter's power module into a standard AC outlet. The charging indicator turns on. It takes about 15 hours to fully charge the battery pack.

Caution: Do not overcharge the battery pack. After charging for 15 hours, remove the battery pack from the charging stand and disconnect the adapter.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage. EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

 
 
 
We Service What We Sell

9/94

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A5



Printed in Hong Kong






RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A5

     Printed in Hong Kong





RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A5

Printed in Hong Kong

