



Cat. No. 23-349

## 18V Ni-Cd and Ni-MH Battery Charger

You can use your RadioShack 18V Ni-Cd and Ni-MH Battery Charger to charge your RadioShack CB walkie-talkie if it uses 12 AA rechargeable Ni-Cd (nickel-cadmium) or Ni-MH (nickel-metal-hydrides) batteries or to charge your RadioShack remote-controlled car if it uses 12 AA rechargeable Ni-Cd or Ni-MH batteries.

3. Plug the battery charger into a standard AC outlet.

### CHARGING

**Input:** 120 VAC 60 Hz 4.5W

**Output:** 18VDC 120 mA (Ni-MH)  
18VDC 90 mA (Ni-Cd)

**Warning:** Never try to recharge non-rechargeable batteries. If you do, they become very hot and could explode.

Follow these steps to charge Ni-Cd or Ni-MH batteries in your walkie-talkie or remote-controlled car.

1. If the walkie-talkie or the remote-controlled car is on, turn it off.
2. Connect the battery charger's barrel plug to your walkie-talkie's or your car's charging jack.

4. To charge Ni-Cd batteries, set **Ni-Cd/Ni-MH** to **Ni-Cd** so the green LED charging indicator lights .

To charge Ni-MH batteries, set **Ni-Cd/Ni-MH** to **Ni-MH** so the red LED charging indicator lights.

5. Charge the batteries fully for 18 hours for the first time. When the batteries are fully charged, the battery charger stops charging and the charging LED indicator turns off.

**Caution:** It takes up to 14 hours to fully charge the batteries from the second time depending on your batteries power condition. Do not overcharge the Ni-Cd or Ni-MH batteries from the second time.

© 1999 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.



### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*


3/97






**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

01A99

    Printed in China








**RadioShack**  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

01A99

   Printed in China





**RadioShack**  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

01A99

Printed in China

