



Cat. No. 23-402

Quick Charge Battery Charger

Your RadioShack Quick Charge Battery Charger recharges the 6V nickel-cadmium battery pack (RadioShack Cat. No. 23-228) used in Tyco® and other 6V radio-controlled vehicles, in 4 hours.

Warnings:

- To reduce the risk of injury, charge only the specified battery type. Other types of batteries might burst, causing personal injury or damage to your charger.
- To reduce the risk of fire or electric shock, connect the charger directly to a standard AC power outlet.
- Do not recharge a battery pack that is damaged or leaking.
- Periodically examine the charger for conditions that might result in a risk of fire, electric shock, or injury to yourself, children, or others. If you observe any breaks in the housing or other conditions that appear different than when you first purchased the charger, do not use it until it is properly repaired by a qualified service technician.

Cautions:


- After use, the battery pack will be hot. Wait at least 20 minutes until the battery pack cools down before recharging it. Charging a warm or hot battery pack greatly reduces the number of times your battery pack can be recharged.
- If the battery pack is wet, thoroughly dry it before charging.

Note: The running time for radio-controlled vehicles varies, depending upon which vehicle you have.


CHARGING

The battery pack requires a complete charge before use. Follow these steps for the first and each subsequent charge.


1. Align the arrow on the bottom of the battery pack with the arrow on the battery charger.

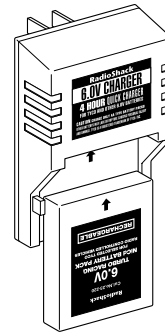

2. Gently press the battery pack against the battery charger, then slide the battery pack in the direction of the arrow until it locks into place.

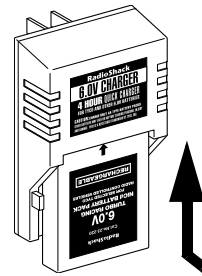

3. Plug the battery charger into a standard AC outlet.

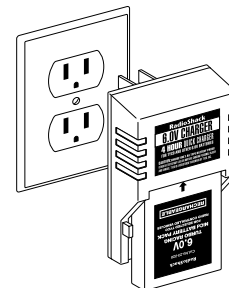

© 1996 Tandy Corporation.
All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.
Tyco® is a registered trademark of Tyco industry, Inc.

Notes:


- When you charge the battery pack the first two times, charge it for 6 hours. Subsequent charges require only 4 hours.

The battery pack discharges when running your radio-controlled vehicle, but it is not fully discharged when the vehicle stops running. If the battery is not used for several days after that, it loses even more of its charge and might again require a full 6-hour charge.

- The battery pack becomes hot after charging. This is normal for fully charged batteries.
- The battery pack can be charged for longer than 4 hours without harm. However, we recommend you remove the battery charger from the AC outlet if you are not going to use the battery pack for several hours.

Caution: Do not charge a battery pack for longer than 24 hours. Overcharging a battery pack results in reduced battery capacity.

4. When charging is complete, unplug the battery charger from the AC outlet.
5. To remove the battery pack, press and hold down the red button on the left side of the charger, then slide out the battery pack.

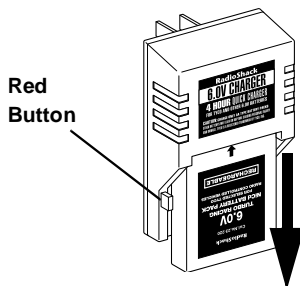

SPECIFICATIONS

Power:

Input 120 VAC, 60 Hz, 3.5 W
 Output 6.75 VDC, 160 mA

Dimensions 4^{11/32} × 2^{3/4} × 1^{1/2} Inches
 (110 × 70 × 38 mm)

Weight 6.5 oz
 (184.3 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RadioShack Limited Warranty


 

 
This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell 10/95



RadioShack
 A Division of Tandy Corporation
 Fort Worth, Texas 76102

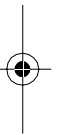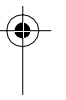

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6

  Printed in China





RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6

Printed in China

