

Charging Instructions

Please read before using this equipment.

This charger is designed to charge 6 volt sealed lead-acid batteries up to 7.0 Ahr **ONLY**. Do not use this charger to charge any other type of battery!

Caution: Do not connect the charger backwards! If the charger is not properly connected, none of the indicators will light. If this happens, disconnect the charger, then reconnect it properly.

Before plugging this charger into an AC115V outlet:

1. Connect the red (+) lead to the positive battery terminal, and the black (-) lead to the negative battery terminal.
2. Plug the charger into an acceptable 115V AC source. The red FAST CHARGE indicator lights.

Note: If the green TRICKLE CHARGE indicator lights, the battery is either fully charged or defective.

3. When the TRICKLE CHARGE indicator lights, the battery is about 90% charged and must remain on the charger until it is fully charged (about 5 hours for a 5Ah battery).

Note: If you connect the charger to a fully charged battery, the FAST CHARGE indicator lights briefly, then the TRICKLE CHARGE indicator lights.

4. Remove the battery from the charger to use it, or leave it connected to the charger to keep the battery fully charged.

Note: Unplug the charger from the wall before you remove the positive and negative battery clips.

RadioShack Corporation
Fort Worth, Texas 76102

23-389
04A01
Printed in USA



© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.