

 
Scanner On-Glass Antenna Kit

OWNER'S MANUAL — Please read before using this equipment.


Your RadioShack Scanner On-Glass Antenna Kit is designed to improve signal reception for your mobile scanner. Installing the antenna is easy and requires no drilling.

Important:

- Before mounting the antenna, move your vehicle to a shaded location where the temperature is 70° to 90° F (21° to 32° C).
- Do not remove the paper backing from the coupler box or antenna base until Step 4. Once you stick the coupler box or antenna base to the glass, you cannot remove it without damaging it.

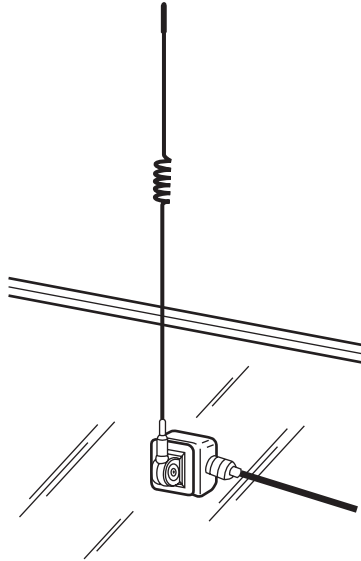

 
1. Select a location for the antenna foot and coupler box (such as the top center of the rear window) that:
 - does not block the driver's view
 - does not interfere with windshield wiper operation
 - is not coated with a metal film-type sunscreen
 - is clear of other antennas
 - is not within 1½ inch of the edge of the glass, a defroster element, or metal trim

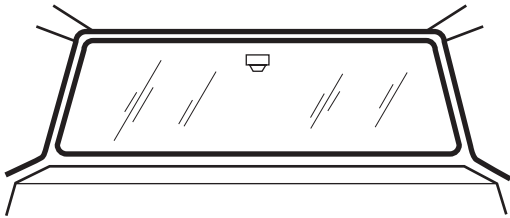


Notes:

- If your windshield has a factory-tinted border, you can mount the antenna over this border. However, if the window tinting is a plastic film applied to the glass, you must cut a hole in the film and mount the antenna foot directly to the glass.
 - Some windshields contain metallic sun screening that can greatly reduce the antenna's performance. If you are not sure whether a material installed in the windshield or applied to it contains metal, consult your vehicle's dealer.
2. Position the antenna and coupler box at the desired location to confirm that neither will interfere with your vehicle's normal operation.

 3. Use the supplied alcohol wipe to clean the inner and outer surface of the glass at the mounting location. Allow the glass to dry completely before continuing.
4. Remove the paper backing from the coupler box and carefully position it over the mounting location. Then firmly press it into place for 5 seconds.
5. Remove the paper backing from the antenna base and carefully position it at the mounting location opposite the coupler box, with the bolt to the right. Then firmly press it into place and hold it for 5 seconds.
6. Screw the supplied cable's connector onto the coupler box.

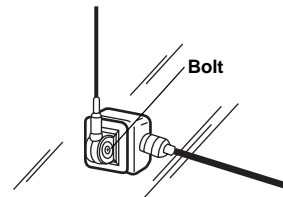

 7. Route the cable to your CB transceiver and connect it according to the transceiver's instructions.
8. Loosen the antenna base's bolt and position the antenna so it is straight up and down, then tighten the bolt.
9. Route the coaxial cable so it does not interfere with passengers or operation of the vehicle.
10. Connect the other end of the coaxial cable to the antenna terminal on the scanner.

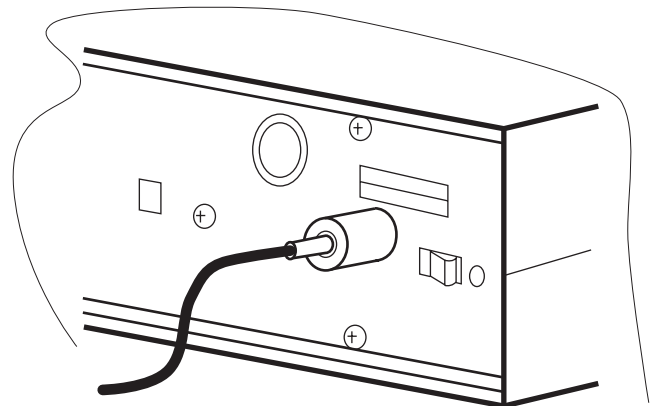

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99