

**R** RadioShack  
**22 Ch GMRS/FRS**  
**Two-Way Radios**  
 Catalog # 21-1904

**Quick Start Guide**  
*for installing, setting up and using your new product*


**Installing Batteries**

You will need four AAA batteries to power the radio. You can use either non-rechargeable alkaline batteries, or rechargeable batteries, such as Ni-Cd and Ni-MH.

1. Rotate **Off** until it clicks to turn off the radio.
2. Pull down on the battery compartment cover, and remove the cover.
3. If you use rechargeable batteries, set **CHARGE ON/ OFF** to **ON**.  
 If you use non-rechargeable batteries, set **CHARGE ON/ OFF** to **OFF**.  
 Then install the batteries according to the polarity symbols (+ and -) marked inside.
4. Replace the cover, and rotate **Off** to turn the radio on.



**! WARNING !**  
 If you use non-rechargeable batteries, be sure to set **CHARGE ON/OFF** to **OFF**. Non-rechargeable batteries can get hot and explode if you try to recharge them.

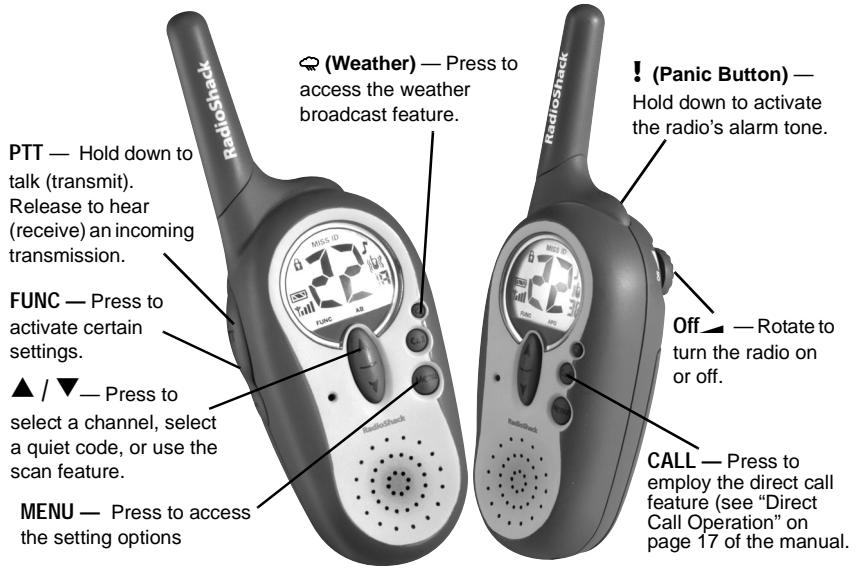

**Selecting Quiet Codes**

There are 38 codes to choose from. See your Owner's Manual for a listing of the quiet codes.

To select the desired quiet code, hold down **FUNC**. **FUNC** appears on the display. Repeatedly press or hold **▲** or **▼** until you see the code number you want to use.

To turn off the quiet code feature, hold down **FUNC** and repeatedly press or hold **▲** or **▼** at the same time until the quiet code number disappears.

**Using VOX**

VOX operation allows you to transmit a voice message without pressing any key.

1. To activate VOX, continuously press **MENU** until **VOX** appears.
2. Press **▲** or **▼** to select the desired sensitivity level (1- 4), select **OFF** to turn Vox off.
3. Press **PTT** to store the setting.  
 When you do not press any key after 20 seconds, while in the Menu, the radio exits the Menu without saving your settings.

**What's Included**  
 Two GMRS/FRS radios - Owner's Manual

**Using Scan**

Press and hold **▲** or **▼** to scan up or down to find the desired channel and quiet code. The radio automatically scans through the channels and pauses on each active channel. While scanning, press **▲** or **▼** to change the scanning direction. Press **PTT** to stop scanning.

**The Weather Radio**

This radio can receive broadcasts from the National Weather Service (NOAA). To turn the weather broadcast on or off, press **WX** and **ALT** appear on the display when the weather function is on. Press **▲** or **▼** to select the weather channel active in your area.

You can also set the radio to monitor the weather broadcast, and alert you to a weather emergency, even while the radio is in the FRS/GMRS mode. To set the weather alert, hold down **☁ On / OFF** flashes. Press **▲** or **▼** to select **On** or **Off**. Then press **PTT** to confirm the setting.

**Resetting the Radio**

If the radio's display locks up or the radio does not work properly after you turn it on, turn it off and then on again. If this does not correct the problem, remove the batteries, wait about ten minutes, and then reinstall them.