



## CHARGING THE BOOKLIGHT

1. Retract the light into the booklight so that it is turned off.
2. Fit the booklight onto the charger as shown above.
3. Insert the adapter's barrel plug into the charger's **DC INPUT** jack.
4. Plug the adapter's other end into a standard AC outlet.



### Notes:

- It takes about five hours to fully charge the booklight.
- Use your booklight for up to three hours after fully charging it.


## USING THE BOOKLIGHT

1. Firmly grasp the light and pull up to extract and turn it on.
2. Clip it onto a book and adjust the light to the best angle for reading.
3. When finished reading, retract the light to its original position to turn it off.



### Cautions:

- The light output is strong enough to injure your eyes. Do not look directly at the light for more than a few seconds.
- You must use a Class 2 power source that supplies 6V DC and delivers at least 200mA. Its center tip must be set to positive and its plug must fit the cradle's **DC 6V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the cradle or the adapter.

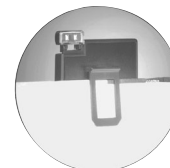

## REMOVING THE BATTERIES

At the end of your booklight's life cycle, remove the batteries to recycle them.

1. Use a Phillips screwdriver to remove the screws from the battery compartment cover and lift off the cover.
2. Remove the four Ni-Cd button-cell batteries.

**Warning:** Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

**Important:** The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



## CARE

Keep the booklight dry; if it gets wet, wipe it dry immediately. Use and store the booklight only in room temperature environments. Handle the booklight carefully; do not drop it. Keep the booklight away from dust and dirt. Wipe it with a damp cloth occasionally to keep it looking new. If your booklight is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website ([www.radioshack.com](http://www.radioshack.com)), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the booklight's internal components can cause a malfunction and might invalidate its warranty.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99